


# LaserWeb Environment Parameter Import

---

1. Please download the LaserWeb .json file in the Environment Parameter section at <https://cubiox.muherz.com/Download.html>
2. Go to the top left corner of the LaserWeb homepage and click  in Workspace.
3. Open the downloaded environment file 'laserweb-profiles\_cubiioX\_v1.2.json.'
4. Navigate to [Settings](#) from the homepage.
5. In the Machine Profile field, find the Machine Id.

▲ 2 versions of workspace sizes are available: Cubiio X\_180x180 cm and CubiioX\_120x120 cm.

## LaserWeb 環境參數匯入教學

---

1. 請於環境參數區域下載LaserWeb .json檔 <https://cubiox.muherz.com/Download.tw.html>
2. 進入LaserWeb主頁左上角找到Workspace按下 
3. 打開剛剛下載的環境檔 laserweb-profiles\_cubiioX\_v1.2.json
4. 從主頁進入Settings
5. 在Machine Profile的欄位中找到Machine Id

▲ 提供兩種版本工作桌尺寸：Cubiio X\_180x180 cm 及 CubiioX\_120x120 cm

# < cubiio X

## Environmental parameters

